

## EZ-2000Plus / EZ-6000Plus Cutter Installation Guide

- |   |                            |
|---|----------------------------|
| 1 | Cutter Cover (EZ-2000Plus) |
| 2 | Cutter Cover (EZ-6000Plus) |
| 3 | Cutter                     |
| 4 | Cable Tie Mount x 2pcs     |
| 5 | Screws x 2pcs              |

**【Note1】**


Do not cut self-adhesive labels! The traces of adhesive will pollute the rotary knife and impair safe operation!

**【Note2】**

The service life of EZ-2000+ Cutter is 500,000 cuts with paper weights 160g/m<sup>2</sup>, and 250,000 cuts with paper weights 200g/m<sup>2</sup>.

**【Note3】**


The service life of EZ-6000+ Cutter is 500,000 cuts.

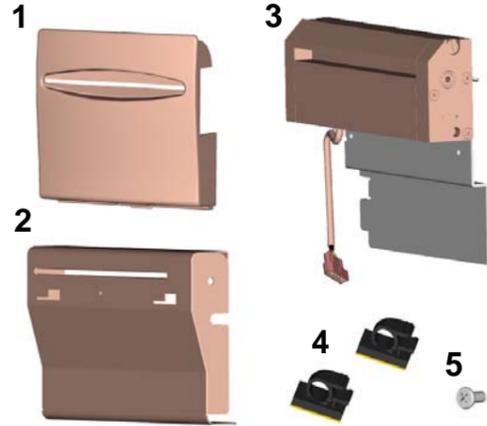


1. Face the printer, and unscrew the screw to remove the bottom front cover.

**【Note】**


Please power off the printer before installing the cutter module.

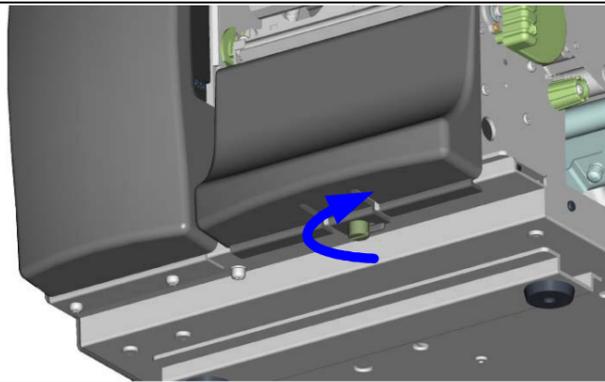


2. Open the top cover and unscrew the two screws in the front to remove the tear off bar.

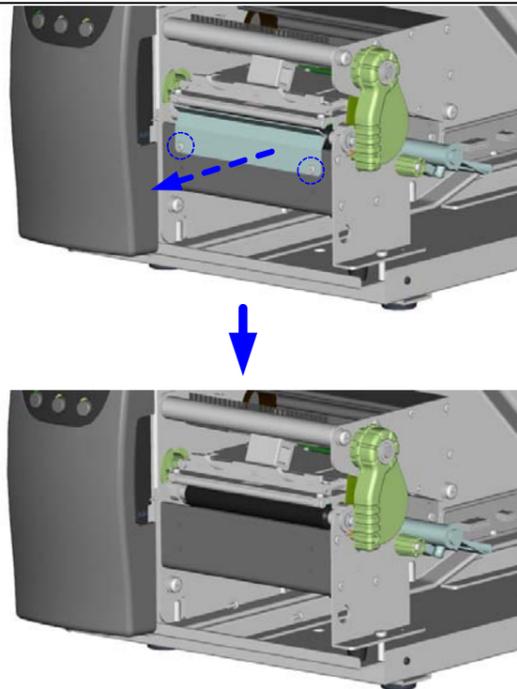


3. Hold the cutter and secure the cutter kit onto the printer.

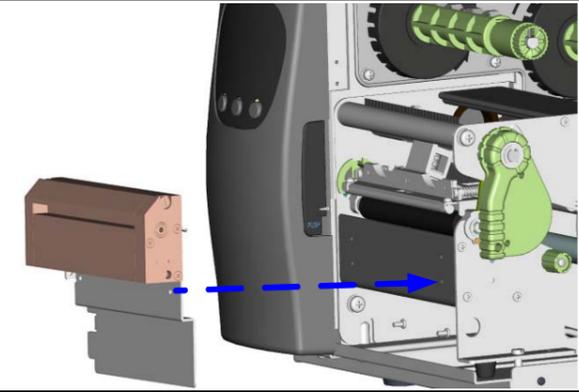

4. Plug the cutter cable connector onto the cutter connector.

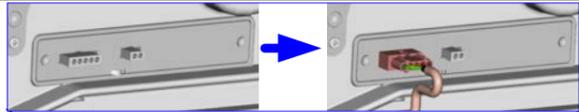

5. Tie the cables with the Cable Tie Mounts, and stick the locks onto the bottom plate.

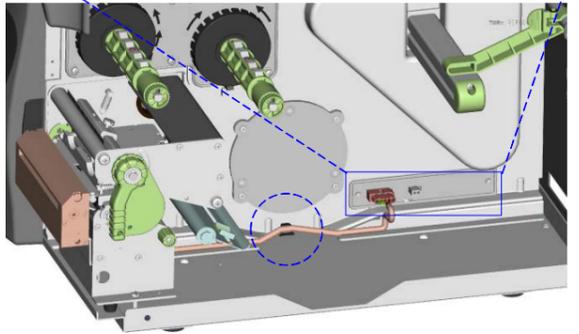

6. Hang up the cutter cover to the cutter and screw the bottom cover screw.

7. Install the media into the printer. Close the Top Cover to complete the cutter installation.

**【Note1】**


Make sure the printer is set to activate cutter function on.

**【Note2】**

The label / paper that used for cutting is suggested to be at least 30mm in height.

**【Suggestion】**

When printing with cutter module, it is suggested to set the stop position (^E) to 26 (for EZ-2000Plus) or 27 (for EZ-6000Plus).

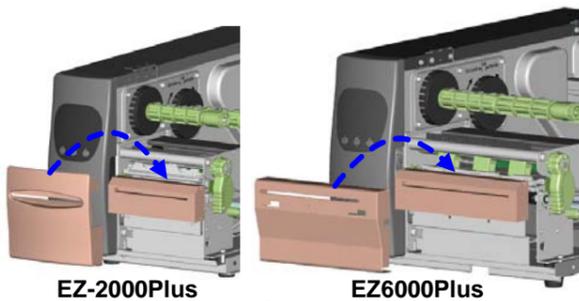

EZ-2000Plus

EZ6000Plus

