
User's Guide

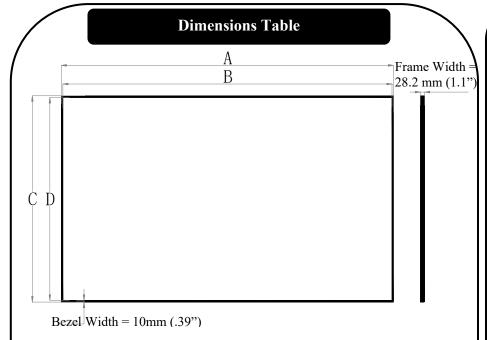


Unit: mm (inch)	A	В	C	D
100" / 16: 9	2234	2214	1265	1245
12011 1 1 5 0	(88.0")	(87.2") 2657	(49.8") 1514	(49.0") 1494
120" / 16: 9	(105.4")	(104.6")	(59.6")	(58.8")

Note: The listed measurements are for general reference only.


Screen Maintenance


Dust, dirt and scratches on the projection screen surface will affect the quality and performance of the projection image. Follow the instructions below to properly maintain the screen.

- The screen surface has a horizontal structure.
 NOT wipe the screen up and down or in a circular motion. Wipe from left to right only.
 Clean the dust on the screen surface with a soft brush or microfiber cloth. A rough towel or
- cloth may damage the screen's surface.
 3) Gently wipe the screen with a moistened microfiber cloth with mild soap diluted in water.
 Notes: The following precautions should alway be followed to avoid damaging the material, which is not covered under warranty.
- Don't <u>touch</u> the screen material to avoid leaving fingerprints. *Use gloves when handling the material*.
- Don't <u>scratch</u> the material, as it will leave permanent markings on the screen's surface.
- Don't <u>point</u> to the screen material with a fingertip or other sharp objects to prevent damage to the material.
- Don't use acetone, benzene, alcohol and any other organic solvents to clean the screen material. Using such chemicals will permanently damage the screen.

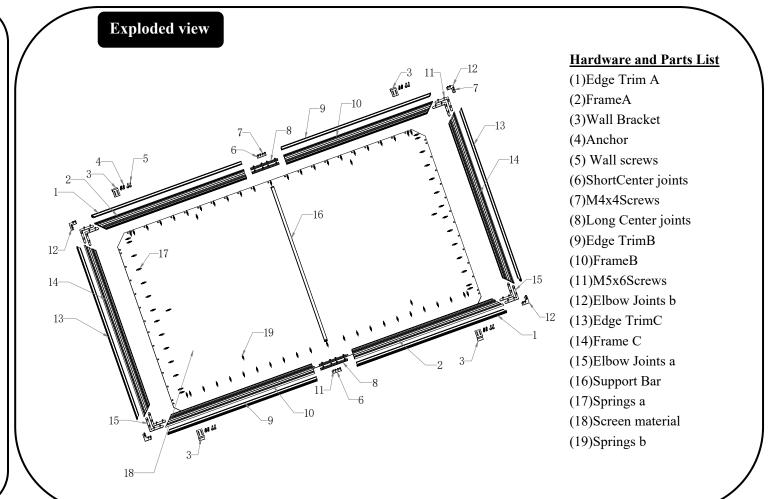


Screen Installation

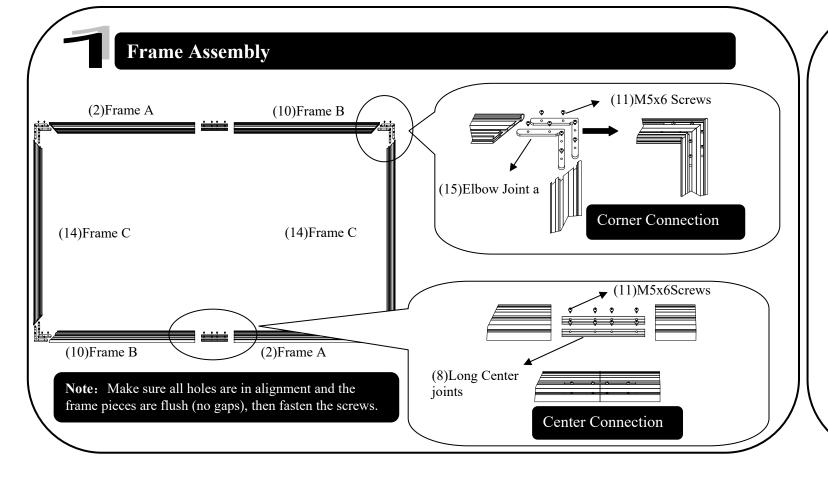

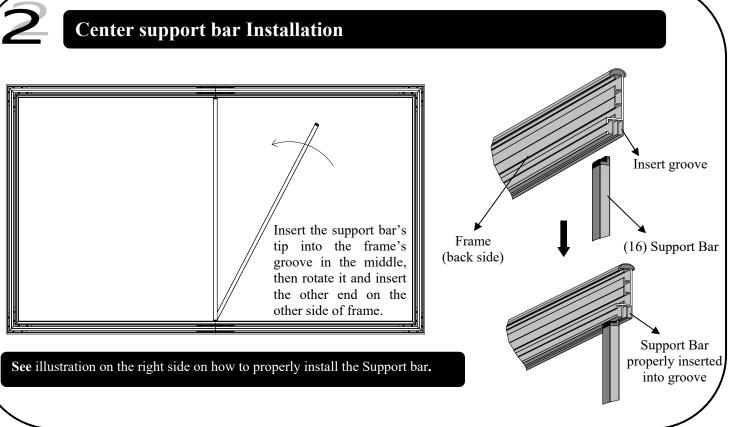




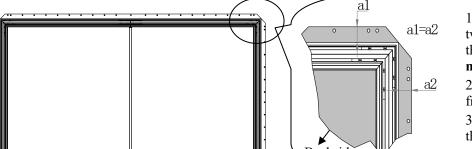

- 1. Put on the supplied pair of white gloves, two people carefully unroll the material on the supplied cloth (keep the front of the material face down)
- 2. Carefully and gently place the assembled frame on top of the screen material.
- 3. Adjust the distance between the edge of the frame and the material (a1 = a2) to 35 mm/1.4"




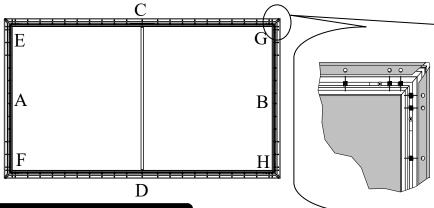


Two people required


- 1. Begin by simultaneously attaching three springs in the center of the side frames $(A \rightarrow B)$ and repeat for top/bottom frames $(C \rightarrow D)$.
- 2. Then, simultaneously attach the springs from the center to all corners.
- 3. Finally, attach the springs at the four corners $(E \rightarrow F \rightarrow G \rightarrow H)$.
- 4. Inspect the assembled screen for flatness.

Spring Attachment Method

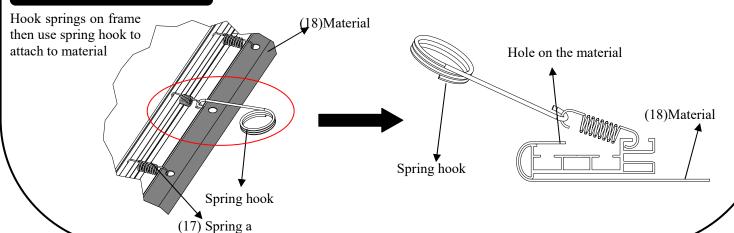



Edge Trim Installation

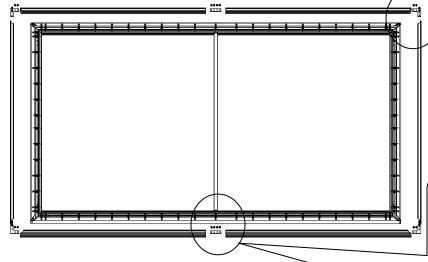

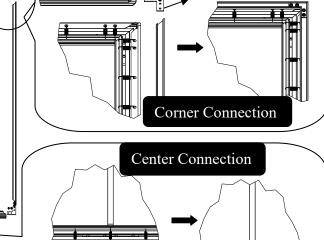

- 1. Connect edge trims A&B to form the top/bottom trims with the Short Center joints, and then insert them on the top/bottom frames.
- 2. Connect the side **edge trims** C with the top/bottom edge trim with elbow joints b.
- 3. Adjust the trim so that the top and bottom trim pieces are touching and show no gaps on the corners. Then fasten them with the M4 x4 screws.

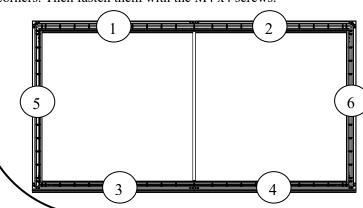

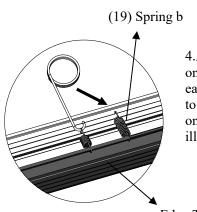


4. Attach a spring b on the middle of each edge trim (1-6) to the frame as show on the left illustration.

(6) Short Center joints

Edge Trim





Wall Installation

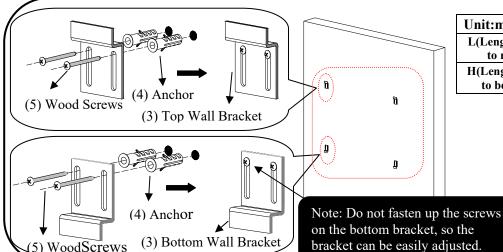


100 120 Unit:mm(inch) 1500 2000 L(Length of left (59.1")to right) (78.7")1083 1332 H(Length of top (42.6") (52.4")to bottom)

Tolerance: ± 3 mm(.12") needed.

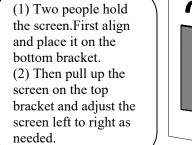

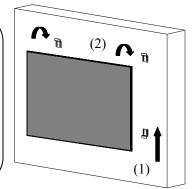

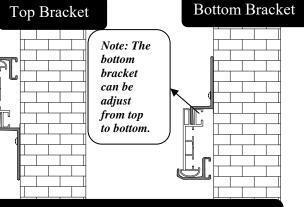

Note: Make sure the direction of the material is correct before you hang the screen to the wall. The material is labeled "DOWN SIDE".





